



COIN ACCEPTORS EUROPE LTD

Global2 & Global€Series

QUICK REFERENCE GUIDE

Display Mode

The COINCO GLOBAL 2/€ Changer is fitted with a 4 digit, 7 segment display located on the acceptor gate. The display mode is utilised via the 4 inventory buttons also located on the acceptor gate.

The Display Mode is used to read information as well as to set different options including price settings and tube float levels.

To enter Display Mode:

- Press the A and D buttons simultaneously for 1 second until the display reads "FILL", "FULL" or "AbCd".
- Press C to enter the audit addresses (D000 – D032) or B to enter the changer and acceptor addresses

Inventory buttons are used to move through the addresses as follows:

Buttons	
Button A.....	ESCAPE
Button B.....	INCREASE
Button C.....	ENTER
Button D.....	DECREASE

If no buttons are pressed for 45 seconds the changer will exit display mode.

HELPLINE 01342 311130

4 The Felbridge Centre, Imberhorne Lane, East Grinstead,
West Sussex RH19 1XP

TEL: 01342 315724 FAX: 01342 313850 email: europe@coinco.com

CONFIGURATION - CHANGER addresses.

ADDRESS	DESCRIPTION	OPTIONS	G	F	A	B
C001-C004	Prices 1 – 4 (Repeated address C101-C104)	Value	N	Y	Y	N
C005-C010	Prices 5 - 10 (Repeated address C105-C110)	Value	N	N	Y	N
C011	Maximum Change	Value	N	N	Y	N
C012	Discount Award (Credit increase when C013 reached)	Value	N	N	Y	N
C013	Discount Trigger	Value	N	N	Y	N
C014	Exact Change Accept Group	Single/Four-Price (Electromechanical) Displays MDB coin type number – Coins up to and including this value will be accepted when there is an Exact Change condition. Executive (Protocol A) Coin Value reported - Coins up to and including this value will be accepted when there is an Exact Change condition.	N	Y	Y	N
C015	Single/Multivend Card Revaluation	Single/Four Price 0 Multi Vend Disabled 1 Multi Vend Enabled Executive (Protocol A) Card Revaluation Off 0 Single Vend Credit Limit 1 Multi Vend Credit Limit 2 Single Vend Price Limit 3 Multi Vend Price Limit Card Revaluation On 4 Single Vend Credit Limit 5 Multi Vend Credit Limit 6 Single Vend Price Limit 7 Multi Vend Price Limit	N	Y	Y	N
C016	Escrow Return Inhibit	0 Coin Return Allowed 1 Coin Return NOT Allowed	N	Y	Y	N
C019	Peripheral And Clear Checksum Flag	No Card Reader 0 Checksum OK 1 Checksum Error Card Reader Installed 4 Checksum OK 5 Checksum Error	N	Y	Y	N
C020	Bill Value (Scaled)	Value	N	Y	N	N
C021	Four Price Timeout	Programmable 4-20 seconds	N	Y	N	N
C029	Card Scale Factor	Value	N	N	Y	N
C030	Max. Credit	Value	N	N	Y	N
C032	“Use Correct Change” value	Value	N	Y	Y	Y
C036	Price Holding and Display	0 Disable Price Holding 2 Enable Price Holding 3 Enable Price Holding and Display	N	N	Y	N
C042	Price Display Mode	0 Disable 1 Enable	N	Y	N	N
C043	Keep Change Mode	0 Disable 1 Enable	N	Y	N	N
C044	Four Price Mode	0 Single Price Mode 1 Four Price Mode	N	Y	N	N
C045	Single Price Vend till Escrow	0 Pulse Vend 1 Vend Holding Until Blocker Signal	N	Y	N	N
C046	Alternate Exact Change Mode	0 Programmed Value 1 Use Highest Price Plus Highest Coin	N	Y	N	N
C047	Mode Switch Disabled	Read Only	N	Y	N	N
C048	Read Only Display (Addresses C001 through C125)	0 Enables Changes From Digital Display 1 Disables Changes From Digital Display	N	R	R	R

CONFIGURATION - CHANGER addresses. (Continued)

C049	Enable DEX Wipe	0 Disables DEX Wipe 1 Enables DEX Wipe	N	R	R	N
C050	DEX Wipe	0 DEX Data Is Present 1 All DEX Cash Accountability Data Cleared	N	Y	Y	N
C051	Bill Acceptor Exact Change Accept group	Value 0 No Bills Accepted	N	N	Y	N
C052	Bill Acceptor Escrow Enable	0 Bill Escrow Enabled 1 Bill Escrow Disabled	N	N	Y	N
C053	MDB Cashless Price Lines	0 Enabled 1 Disabled	N	N	Y	N
C054	MDB Cashless Response Delay	Programmable 5-50ms	N	N	Y	N
C055	Number of Active Prices	Programmable 1-25	N	N	Y	N
C056	Executive Audit Peripheral Device Enable	0 Disabled 1 Enabled, Interim 2 Enabled, Total 3 Enabled, Interim and Total	N	N	Y	N
C060 – C067	DEX Audit Field – ID101	Machine Identification Number - Each address represents a digit	N	N	Y	N
C074- C089	Token Values (Types A-P)	Value	N	N	Y	N
C090 – C097	ID104 DEX Field	Machine Location Number - Each address represents a digit	N	N	Y	N
C101 – C104	Prices 1 – 4	Value	N	Y	Y	N
C105- C125	Prices 5 – 25	Value	N	N	Y	N
C201 – C225	Cashless Prices	25 Cashless Price lines	N	N	Y	N

 
NOTE, MDB ADDRESSES C001-C125 VIA MACHINE ONLY

CONFIGURATION – ACCEPTOR addresses

DISPLAY ADDRESS	DESCRIPTION	OPTIONS
A001	Select Unit Configuration Applicable to Dual Currency models only	1 Enables and pays out coins 16-31 2 Enables coins 0-31, pays out coins 16-31 3 Enables coins 0-31, pays out coins 0-15 4 Enables and pays out coins 0-15
A002	Configuration and Payout	Set Standard Configurations Or Set Own
A003	Token Coin Enable	0 Disable 1 Enable
A004*	Coin Ratio (read only)	Coin Values
A005*	Coin Enables	0 Coin is Disabled 1 Dummy Coin 2 Normal, Non Compressed 3 Normal
A006*	Validation Acceptance Level Setting For Each Of The 32 Coins	Relative Acceptance Levels (1-10) For All 32 Coin Types 1 Highest Slug Protection 7 Factory Acceptance Rate 10 Highest Acceptance Rate, Boundary Checks Only
A007	Float Setting – All Tubes	Each Digit Represents A Tube "ABCD" 0 Float Mode Disabled 1 Float Level Set 2 Float Pay-Down Set
A008*	Float Setting – Individual Tube Access	0 Float Mode Disabled 1 Float Level Set 2 Float Pay-Down Set
A009	Alternative Payout	0 Disable Enhanced Coin Payout 1 Enable Enhanced Coin Payout
A010	Scaling Factor	Value Used To Scale All Coins
A011	Decimal Point Value (Read Only)	Value
A012	Remainder Enable (Applicable to dual currency models only)	0 Remainder Disabled 1 – 4 Remainder Enabled

*Sub menu

TROUBLESHOOTING

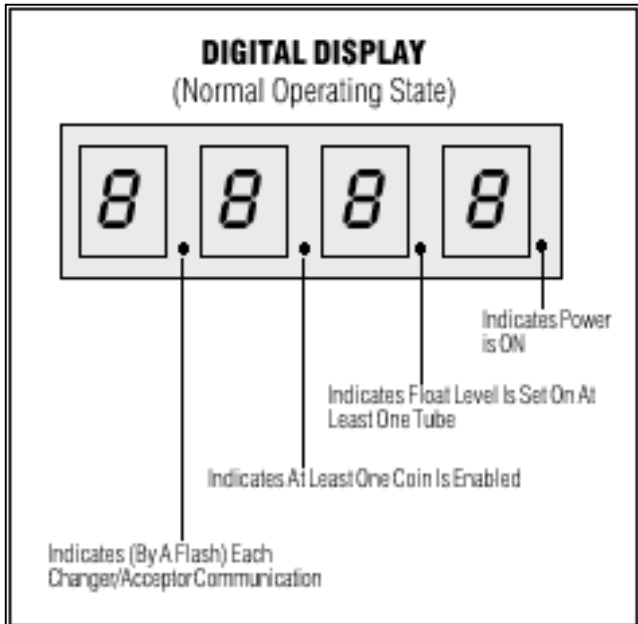

Error Codes

If an error has been detected in the changer, the display will flash the message “ErOr”. To view the list of errors, enter the display mode where the “Fill/Full/AbCd” message will be replaced by one of the following error codes.

- “FULL/FILL/AbCd”.....No Errors
- “E001”.....Validation Sensor Error
- “E002”.....Tube Sensor Error
- “E003”.....Coin Jammed
- “E004”.....Payout Error
- “E005”.....ROM Error
- “E006”.....Configuration Error
- “E007”.....Line Voltage Error

Diagnostics

When the coin return lever is depressed both the decimal points (Figure 1) and the four digits (Figure 2) are used to communicate various diagnostic conditions as follows:

When a coin is dropped in the changer the display will indicate a response to the coin. If a coin was not recognised the display would show “- -”. If a coin was recognised the coin type no. would be displayed i.e. 04. If it was recognised but not accepted the changer would report a code followed by -04.

The reported code would be one of the following:

- n – Not sensed at credit sensors
- C – Coin disabled on VMC or cashbox sensor blocked
- d – Coin disabled on acceptor
- U – Coin value out of range
- t – Coin set not enabled

Cleaning

A majority of your COINCO GLOBAL changer is manufactured from high-quality plastic, which should only be cleaned with a warm water and mild detergent solution.

CAUTION:

- Never submerge unit in water.
- Do not use petroleum solvents, steel wool, scouring pads, or a metal brush for cleaning.
- Do not spray any part of the changer with any type of lubricant.

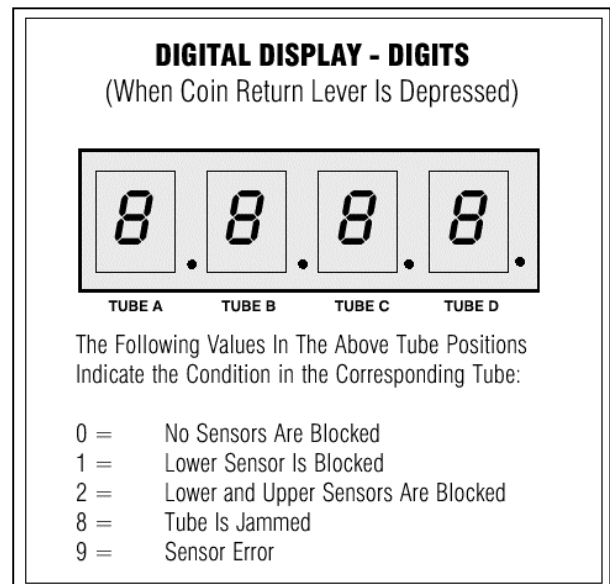 


Figure 1

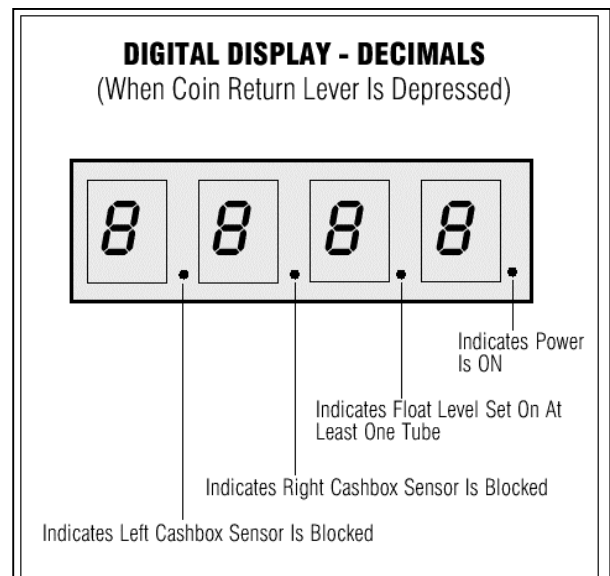 


Figure 2